

SUNFLOWER KIT FOR CORNHEAD

1- REMOVE THE CHAINS, CHAIN TENSIONERS, DECK PLATES AND GO FORTH UNTIL THE ROW UNIT APPEARS AS SHOWN IN THE PICTURE BELOW

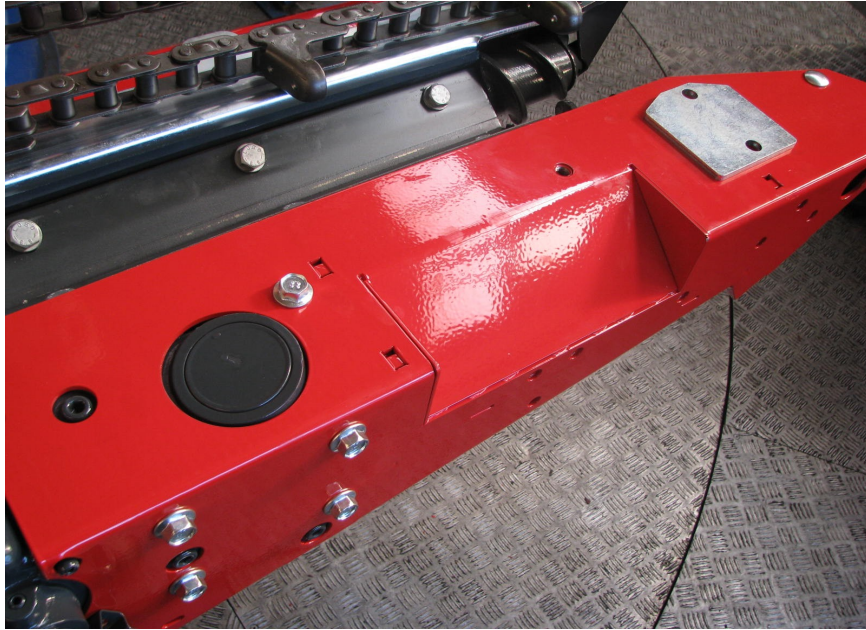


Figure 1

2- INSTALL THE CHAIN AND THE TENSIONER.
BE CAREFUL! THE CHAIN MUST TO BE IN THE RIGHT PHASE AS SHOWN IN FIGURE 3

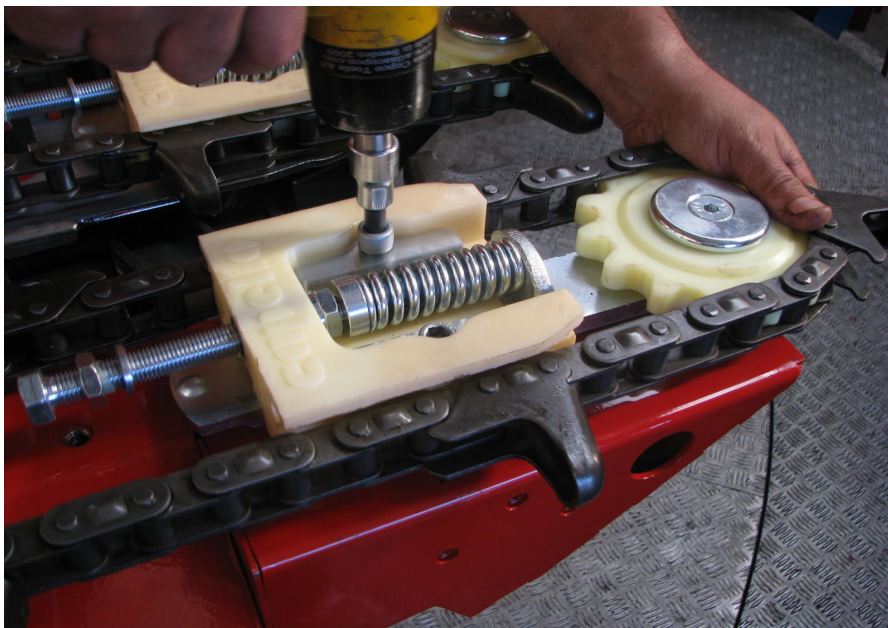


Figure 2

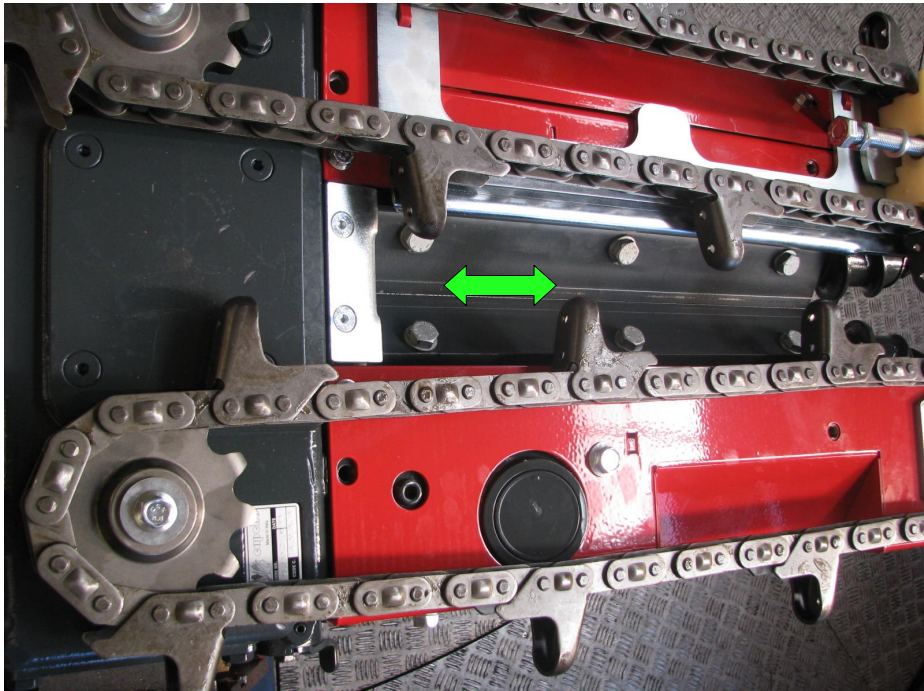


Figure 3

3- CHECK IF THE KIT IS POSITIONED AS SHOWN IN FIGURE 4. IF NOT LOOSE THE BOLTS AND FIT CORRECTLY THE BLADE. THEN TIGHTEN AGAIN THE BOLTS.

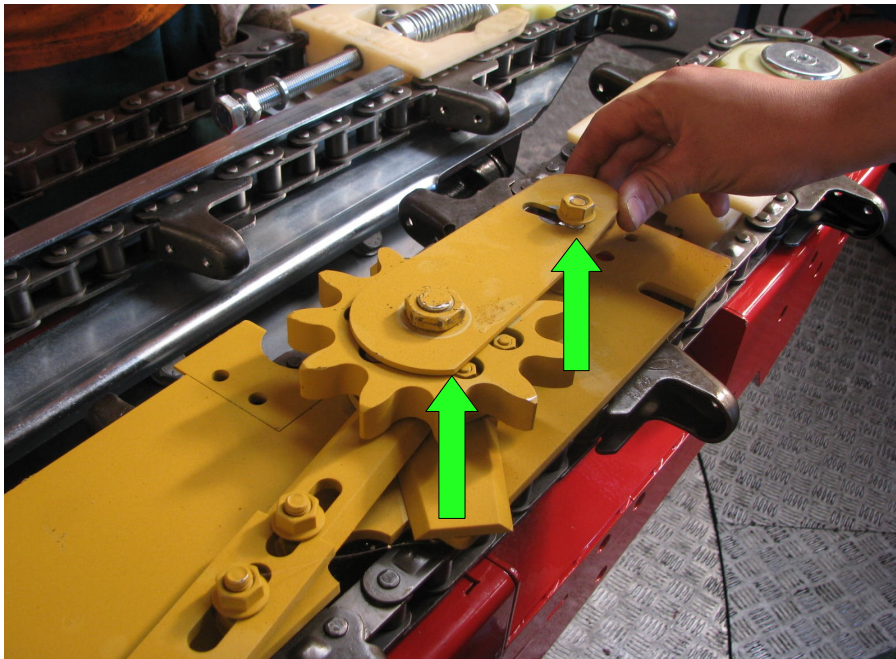


Figure 4

4- FIT THE SUNFLOWER KIT (FIGURE 5).

BE CAREFUL! THE INNER EDGE OF THE KIT MUST BE OVER THE DECK PLATE AND PERFECTLY ALIGNED (FIGURE 6).

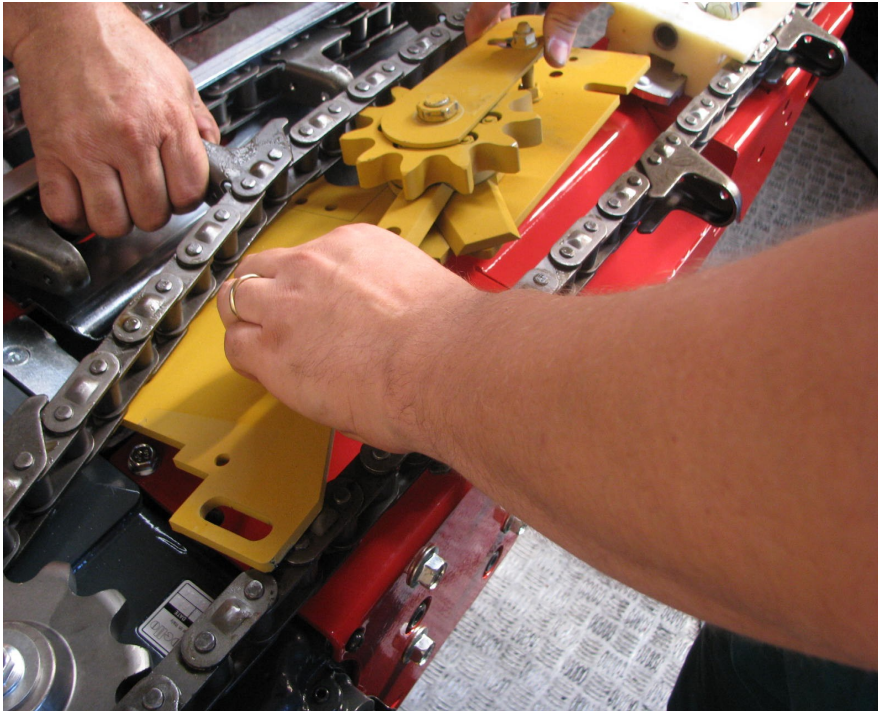


Figure 5

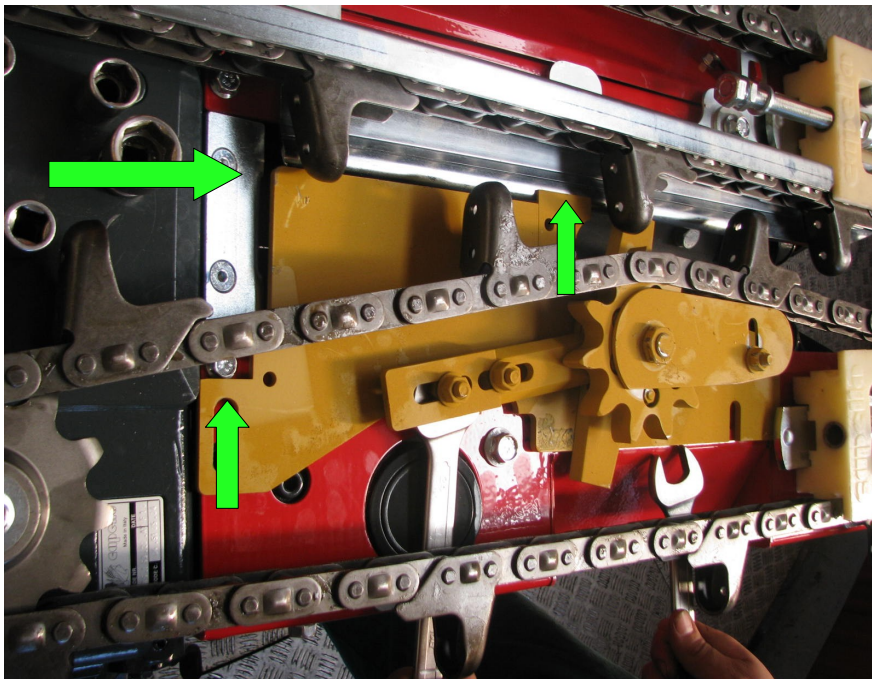


Figure 6

5- FIT THE GATHERING CHAIN COVER AND TIGHTEN THE BOLTS.

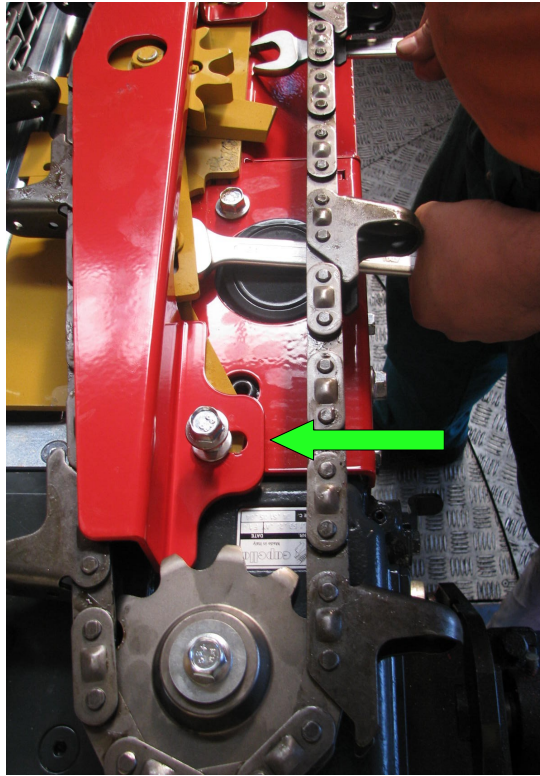


Figure 7

6- TIGHTEN THE CHAIN

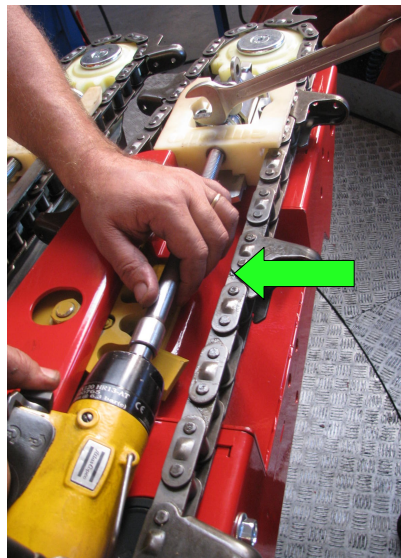


Figure 8

7- SUNFLOWER KIT INSTALLED (FIGURE 9).

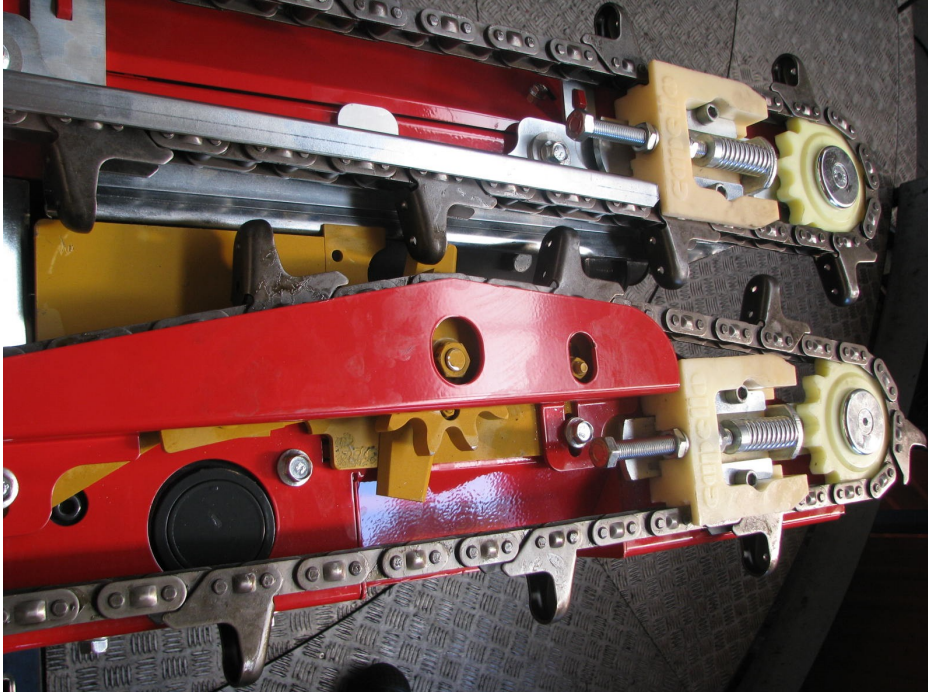


Figure 9

BE CAREFUL! THE ROW UNIT AT THE RIGHT SIDE OF THE HEADER HAS THE KIT INSTALLED IN THE OPPOSITE SIDE!

REMOVING THE SUNFLOWER KIT

1- LOOSEN THE CHAIN.

REMOVE THE CHAIN COVER AND THE SUNFLOWER KIT.

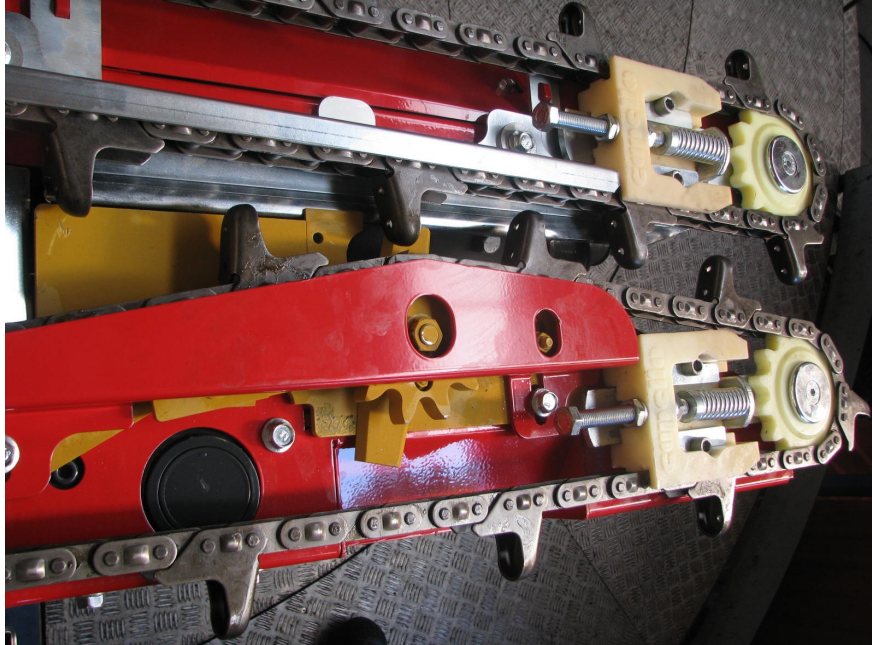


Figure 10

2- REMOVE THE CHAIN TENSIONER.

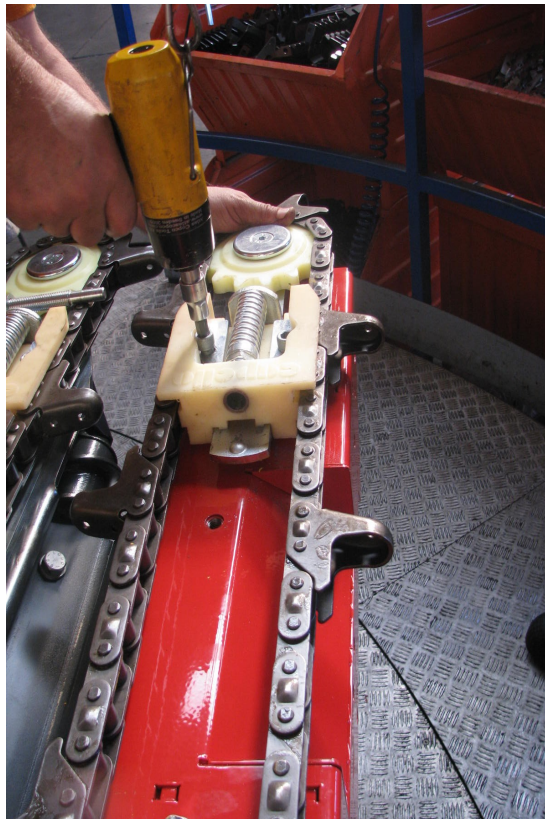


Figure 11

3- WHEN THE LEFT HAND DECK PLATE IS WIDE OPEN INSTALL THE RIGHR HAND ONE.
INSTALL THE CHAIN.

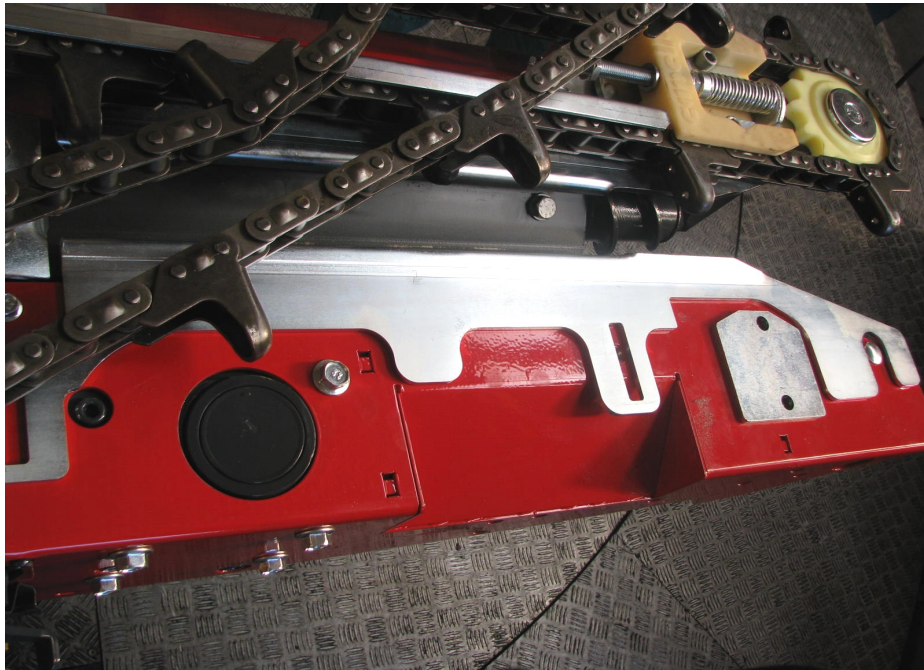


Figure 12

4- INSTALL THE CHAIN COVER AND TIGHTEN THE BOLTS. CHECK THE CLEARANCE BETWEEN DECK PLATES (MUST BE 20mm).

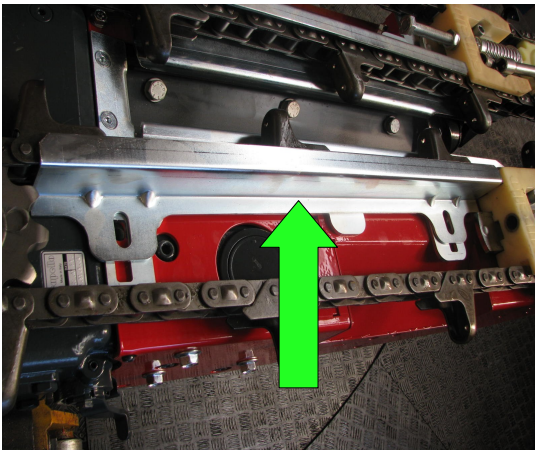


Figure 13

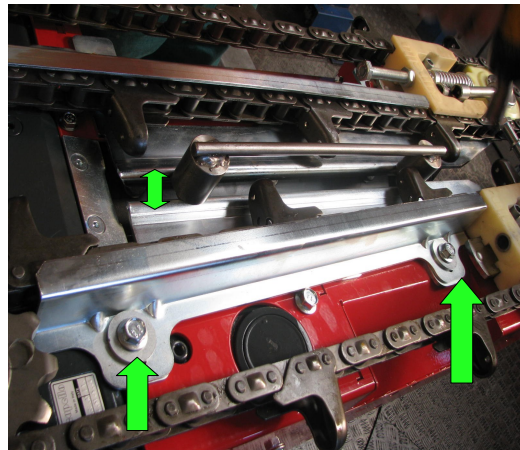


Figure 14



5- TIGHTEN THE CHAIN.

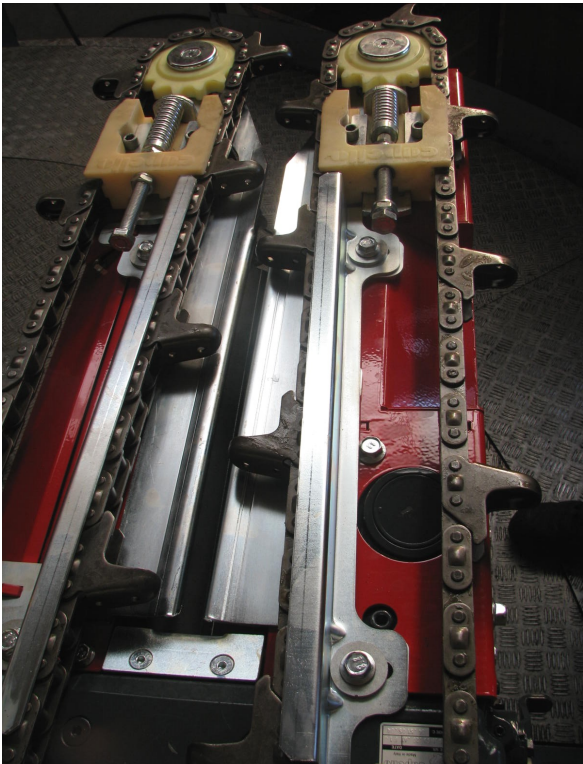


Figure 15